



VIBREX TYPE FUD-EQ INSTALLATION INSTRUCTIONS

- A) ISOLATORS ARE SHIPPED ASSEMBLED AND READY TO INSTALL.
- B) LOOSENED THE JAM NUT (2)
- C) ATTACH UNIT TO ISOLATORS (1) WITH LEVELING BOLT (2)
- D) LEVEL THE UNIT.
- E) THE ISOLATOR SHOULD BE ANCHORED TO THE STRUCTURE WITH THE REQUIRED TYPE ANCHOR BOLTS (3) (BY OTHERS) *ONLY AFTER ALL ISOLATORS ARE OPERATING PROPERLY!* (VIEW B)

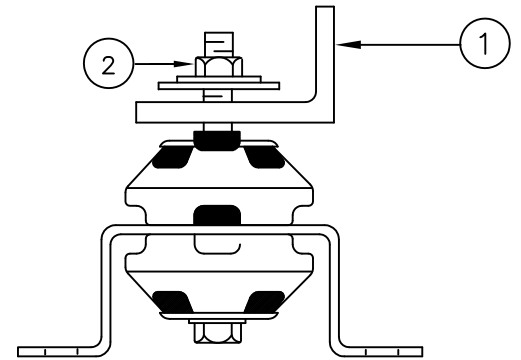

VIEW A

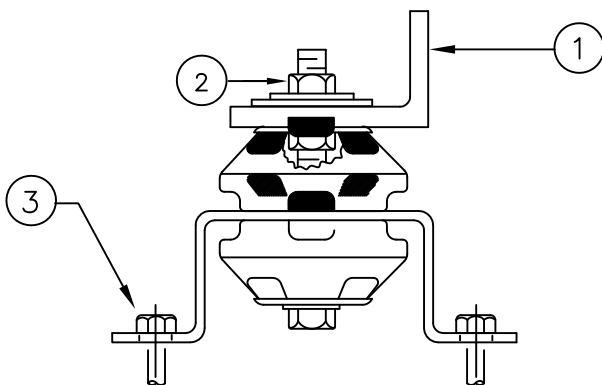

VIEW B